

Simply DvH  
AT-4075 DVB

LAST REC CBL

1 2 3

4 5 6

7 8 9

MUTE 0 LAST

VOL CH

SEL EVD

POWER A FWD STOP

## Programming And Operating Instructions

To have a clearer idea of the features and capabilities of your remote control, take a moment to read these instructions. Save for future reference.

Your Simplicity® DVR remote control is simple to program, easy to use, and can operate two (2) devices, which include :

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

## 2. Installing / Replacing Batteries

When the indicator light becomes dim or no longer illuminates during use, install 4 new “AA” size batteries.

### 3. Operating Your Cable Terminal

2

**Model RT-U27B DVR** is pre-programmed to operate the Scientific-Atlanta Explorer® 8000 series digital set-top terminal.

**Note** : If you do not have a cable set-top terminal and wish to control channels through your TV, refer to Section 5 after you've programmed your remote to operate your TV (Section 4)

If you have a TV that's operated by remote control, it is recommended that you plug it directly into a wall outlet instead of the cable set-top terminal.

1. Turn on the TV you want to program your remote to operate.

3. a. Locate the 3-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off.

b. As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].

3

Brand	Code									
Admiral	026	054	211	213						
Adventura	047									
Advent	072	094	425							
Aiwa	214									
Akai	053									
Amark	023	215								
Amstrad	157									
Anam	217	218	219	220	221	222	223			
AOC	053									
Apex	030	038	427							
Audiovox	220									
Belcor	073									
Bell & Howell	211	213								
Broksonic	165	167								
Brokwood	073									
Candle	068	091								
Centurion	095	107	108							
Citizen	068	091	211	213	233					
Concerto	073	095								
Contec	147									
Coronado	023									
Craig	223									
Crown	023									
Curtis Mathes	016	054	107	108	211	213				
Daewoo	051	068	073	095	158	159	189	191	194	196
	197	198	200	202	204	205	206	207	209	
Daytron	073	095	107	108						
Dumont	073									

5

67

⑧

### 5. Programming Channel Control-If You Don't Have A Cable Set-Top Terminal.

When you first program your Simplicity® DVR remote, it will control channels (CH +/-, 0-9, Last) through your cable set-top terminal.

If you do not have a cable set-top terminal and wish to control these features on your TV, follow these steps :

1. Press [CBL POWER], then [MUTE] together - hold both buttons down until the LED illuminates.
2. Press [0, 0, 0]. Each time you enter a 0, the LED will blink green and remain illuminated.
3. When you enter the third digit (0), the LED blink three times and go out.

Note : when controlling functions / channels on the TV (VOL+/-, MUTE, 0 - 9, Ch +/-, LAST, SEL), the LED will illuminate green.

To return channel control through your Cable set-top terminal, repeat step 1 above, then press [9, 9, 9] in step 2.

### 6. Programming Volume Control

When you first program your Simplicity® DVR remote, volume and mute are controlled through your TV.

To program volume control to your Cable set-top terminal:

1. Press [CBL POWER], then [MUTE] together until the LED illuminates.
2. Press [VOL ▲], then [CBL POWER] for Cable volume.
3. The LED will blink and go out.

9

[SWAP] - Swap tuners in dual-tuner Motorola DVR terminals.  
(RT-U27A DVR)

[PPV] - Display PPV events. (RT-U27A DVR) (RT-U27A DVR)

[EXIT] - Exit Program Guide, menu. (RT-U27A DVR)

Rev. 04/2005

© 2005, Contec

13

To program volume control to your TV:

1. Press [CBL POWER], then [MUTE] together until the LED illuminates.
2. Press [VOL ▲], then [TV POWER] for TV volume.
3. The LED will blink and go out.

### 7. Code Number Readback

To identify the 3-digit TV setup code stored under the Point and Press™, method...

1. Press [TV POWER], then [MUTE] together - until the LED illuminates.
2. Press [LAST / FAV] to identify your TV setup code. The indicator light will "blink back" the code numbers, with a 1-second interval between each digit of the code.

Example : For code "035", the indicator light will blink 10 times, then 3 times, then 5 times.

### 8. Resetting Your Remote

To reset your remote control to its default settings...

1. Press [CBL POWER], then [MUTE] together until the LED illuminates.
2. Press [CBL POWER], then [CBL POWER] again. The LED will blink and go out.

### 9. Helpful Tips and Troubleshooting

1. Your remote is equipped with a Point and Press® Programming label on the back of its case. This will help you quickly program the remote

### RT-U27A DVR



14

without using codes.

2. The LED will remain on while the remote is in a programming mode. In the absence of an entry, the LED will go out after 45 seconds. When locking in your devices, the LED will blink and go out.

3. When using the Point and Press® programming method, you may find a code that turns your TV off but not back on. If this happens...

- a. the correct code has not been found. Continue pressing [CH ▲] until your TV turns on and off.  
OR
- b. you may have gone past the correct matching code. Try pressing [CH ▼] one step at a time until you find a code that turns your TV back on.

4. If you have any questions concerning the operation of your Cable set-top terminal, contact your cable operator.

5. Time Out - If the same button is pressed and held for 45 seconds, your remote control will turn itself off automatically.

This extends battery life should the remote become lodged under or between heavy objects, for example sofa cushions.

### 10. Using Your Remote Control

The operation of each button on your Simplicity® DVR remote is as follows :

[CBL Power] - Cable power on / off.

11

### RT-U27B DVR



15

### RT-U27AB DVR



16

[TV Power] - TV power on / off.

[LIST] - Listing of DVR recordings

[REC] - Record DVR program

[0] - [9] - Enter channel numbers.

[MUTE] - Mute volume.

[INFO] - Display channel / program information.

[SETTINGS] / [MENU] - Display digital terminal settings.

[LAST / FAV] - Recall last or favorite channel.

[VOL ▲ / ▼] - Increase or decrease volume.

[CH ▲ / ▼] - Increase or decrease channel.

[▲, ▼, ◀, ▶] - Navigates through Program Guide, menu.

[SELECT] / [OK] - Select Program Guide choice.

[STOP] - Stop DVR program

[REW] - Rewind DVR Program

[PLAY] - Play DVR program

[FWD] - Fast forward DVR program

[PAUSE] - Pause DVR Program

[GUIDE] - View Program Guide.

[A], [B], [C] - On-screen decision buttons.  
(RT-U27AB DVR, RT-U27B DVR)